


Problem	Reason	Solution
Dishwasher is not working	Power Socket Problem	<ul style="list-style-type: none"> Take out plug and check that socket with help of tester or any electric mosquito repellent machine or any hand blender etc.



Problem	Reason	Solution
Dishwasher showing E1 Error	Tap Closed	<ul style="list-style-type: none"> Open the water supply tap.
	Drain Pipe flat on ground	<ul style="list-style-type: none"> Keep drain pipe 1.5 ft above the ground level.
	Inlet filter dirty	<ul style="list-style-type: none"> Close the water supply Open the Inlet pipe carefully Remove the filter by pulling it out Clean it in running water.

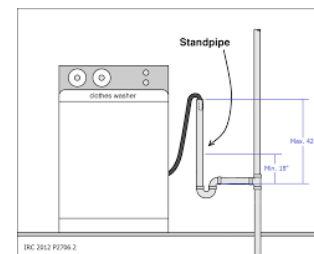

Problem	Reason	Solution
Unpleasant smell is coming	Cleaning required	<ul style="list-style-type: none">• Fill detergent dispenser with white vinegar.• Run the rapid program without vessels.• Clean Both the filter available inside the cavity in running water.

We appreciate your efforts for solving the issue on your own but in case of issue is not sorted or further help required then please write to us on our mail ID ks-customer@franke.com on under contact us section on our website www.faberindia.com . Will serve you on priority once the services are resumed.



- Specially Designed for Oily Surface Cleaning
- Antibacterial Properties
- Nonionic Formulation

General maintenance tips:

- For Outside body cleaning, wipe it with dry cotton or micro fiber cloth.
- Professional cleaning should be done in every 6 month by Faber authorized service.
- Never use detergent for cleaning.
- Never use dishwasher in case salt and rinse aid indicator is on.
- Do not use hard/metal scrubber on Dishwasher, It may lead to scratches.
- Please refer the user manual for detailed use & care information.