

Problem	Reason	Solution
Oven/MWO not working	Power Socket Problem	<ul style="list-style-type: none"> Take out plug and check the power socket with help of tester or any electric mosquito repellent machine or any hand blender etc.



Problem	Reason	Solution
Less Heating	Temperature /Power is not selected properly	<ul style="list-style-type: none"> Select the appropriate power/temperature.
	Heater dirty	<ul style="list-style-type: none"> Switch off the power supply Ensure heater element is not hot. Wipe heater with dry cotton or micro fiber cloth without water or any liquid cleaner.

Problem	Reason	Solution
Unpleasant smell is coming	Cleaning required	<ul style="list-style-type: none">• Take 500 Ml water in Oven/MWO safe bowl and mix 1 table spoon lime juice in it.• Put this bowl on bottom cavity.• Run bottom heater function on 120 degree for 15 Min in oven• Run MW function for 10 Min in MWO• Wipe the cavity with dry cotton or micro fiber cloth.



We appreciate your efforts for solving the issue on your own but in case of issue is not sorted or further help required then please write to us on our mail ID ks-customer care.in@franke.com on under contact us section on our website www.faberindia.com . Will serve you on priority once the services are resumed.

Faber has exclusive range of professional cleaners which will help to get great performance from the product owned by you. You may also order these on our website www.faberindia.com



- Specially Designed for Oily Surface Cleaning
- Antibacterial Properties
- Nonionic Formulation

General maintenance tips:

- For Outside body cleaning, wipe it with dry cotton or micro fiber cloth.
- Professional cleaning should be done in every 6 month by Faber authorized service.
- Never use detergent for cleaning.
- Do not use hard/metal scrubber on Oven/Mwo, It may lead to scratches.
- Please refer the user manual for detailed use & care information.